

Концевые выключатели 9007 MS/ML

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70





















Казахстан +(727)345-47-04





















Беларусь +(375)257-127-884
























Узбекистан +998(71)205-18-59







 





 









Киргизия +996(312)96-26-47










 










эл.почта: tuq@nt-rt.ru || сайт: <https://telemecanique.nt-rt.ru>












 








	<u>7D</u>	Limit switch lever, 9007, lever ms +options
	<u>7DN</u>	Limit switch lever, 9007, ms+ml +options
	<u>7FIN</u>	Limit switch lever, 9007, 9007MS/ML zinc, fixed length, outside nylon roller
	<u>7F3N</u>	Limit switch lever, 9007, 9007MS/ML zinc, fixed length, outside nylon roller
	<u>7F4N</u>	Limit switch lever, 9007, ms+ml +options
	<u>7JIN</u>	Limit switch lever, 9007, 9007MS/ML zinc, fixed length, outside nylon roller
	<u>7J4N</u>	Limit switch lever, 9007, 9007MS/ML zinc, fixed length, outside nylon roller
	<u>7N</u>	Limit switch lever, 9007, limit ms+ml +options
	<u>7S</u>	Limit switch lever, 9007, limit ms+ml +options
	<u>7A1</u>	Limit switch lever, 9007, ms+ml +options
	<u>7AIN</u>	Limit switch lever, 9007, ms+ml +options
	<u>7A2</u>	Limit switch lever, 9007, 9007MS/ML zinc, fixed length, outside steel roller
	<u>7A2N</u>	Limit switch lever, 9007, ms+ml +options
	<u>7A3N</u>	Limit switch lever, 9007, ms+ml +options
	<u>7A4N</u>	Limit switch lever, 9007, ms+ml +options
	<u>7A7N</u>	Limit switch lever, 9007, ms+ml +options
	<u>7BIN</u>	Limit switch lever, 9007, ms+ml +options
	<u>7B2</u>	Limit switch lever, 9007, 9007MS/ML zinc, fixed length, outside steel roller
	<u>7B3N</u>	Limit switch lever, 9007, ms+ml +options
	<u>7B4N</u>	Limit switch lever, 9007, ms+ml +options

	<u>7XA1</u>	Limit switch lever, 9007, ms+ml +options
	<u>7XAIN</u>	Limit switch lever, 9007, 9007MS/ML zinc, fixed length, inside nylon roller
	<u>7XA3N</u>	Limit switch lever, 9007, 9007MS/ML zinc, fixed length, inside nylon roller
	<u>7XB3N</u>	Limit switch lever, 9007, 9007MS/ML zinc, fixed length, inside nylon roller
	<u>7XJIN</u>	Limit switch lever, 9007, ms+ml +options
	<u>7XJ3N</u>	Limit switch lever, 9007, 9007MS/ML zinc, fixed length, inside nylon roller
	<u>7XJ4N</u>	Limit switch lever, 9007, ms+ml +options
	<u>9007ML01S040683</u>	Limit switch, 9007, 9007ML top push plunger, 12' side cable
	<u>9007ML01S1300</u>	Limit switch, 9007, 9007ML top push plunger, 33' bottom cable
	<u>9007MS01S0106</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS01S010621</u>	Limit switch, 9007, ms top push plunger, 3' side cable
	<u>9007MS01S0200</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS01S0206</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS01S0300</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS01S0306</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS01S0400</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS01S0406</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS01S0500</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS01S0502</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS02G0054</u>	Limit switch, 9007, 240 VAC 3 amp ms +options

	9007ML01S040683	Limit switch, 9007, 9007ML top push plunger, 12' side cable	
	9007ML01S1300	Limit switch, 9007, 9007ML top push plunger, 33' bottom cable	
	9007ML02S0100	Limit switch, 9007, 240 VAC 10amp ml +options	
	9007ML02S0300	Limit switch, 9007, 240 VAC 10amp ml +options	
	9007ML02S0400	Limit switch, 9007, 240 VAC 10amp ml +options	
	9007ML03S0100	Limit switch, 9007, 240 VAC 10amp ml +options	
	9007ML03S0500	Limit switch, 9007, 9007ML cross roller plunger, 18' bottom cable	
	9007ML04S0100	Limit switch, 9007, 240 VAC 10amp ml +options	
	9007ML04S0300	Limit switch, 9007, 9007ML rotary spring rtn. _ CW & CCW, 9' bottom cable	
	9007ML07S0100	Limit switch, 9007, 240 VAC 10amp ml +options	
	9007ML10S0200	Limit switch, 9007, 240 VAC 10amp ml +options	
	9007ML10S0400	Limit switch, 9007, 240 VAC 10amp ml +options	
	9007MS01S0100	Limit switch, 9007, 240 VAC 10amp ms +options	
	9007MS02S0121	Limit switch, 9007, ms parallel roller plunger, 3' bottom cable	1
	9007MS02S0200	Limit switch, 9007, 240 VAC 10amp ms +option	1
	9007MS02S0206	Limit switch, 9007, 240 VAC 10amp ms +options	1
	9007MS02S0300	Limit switch, 9007, 240 VAC 10amp ms +option	1
	9007MS02S0310	Limit switch, 9007, 240 VAC 10amp ms +options	1
	9007MS02S0400	Limit switch, 9007, 240 VAC 10amp ms +options	1
	9007MS02S0402	Limit switch, 9007, 240 VAC 10amp ms +options	1
	9007MS02S0406	Limit switch, 9007, ms parallel roller plunger, 12' side cable	1
	9007MS02S040610	Limit switch, 9007, 240 VAC 10amp ms +options	1
	9007MS02S0410	Limit switch, 9007, 240 VAC 10amp ms +options	1

	<u>9007MS02S0410</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS02S0500</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS02S0510</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS03S0054</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS03S0100</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS03S0106</u>	Limit switch, 9007, ms cross roller plunger, 3' side cable
	<u>9007MS03S0200</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS03S0300</u>	Limit switch, 9007, 240 VAC 10amp ms +option
	<u>9007MS03S0306</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS03S0400</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS03S0402</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS03S0410</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS04G0054</u>	Limit switch, 9007, ms rotary spring rtn. _ CW & CCW, M12 DC bottom
	<u>9007MS04G0500</u>	Limit switch, 9007, ms rotary spring rtn. _ CW & CCW, 18' bottom cable
	<u>9007MS04G0510</u>	Limit switch, 9007, ms rotary spring rtn. _ CW & CCW, 18' bottom cable
	<u>9007MS04S0054</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS04S0084</u>	Limit switch, 9007, switch
	<u>9007MS04S0100</u>	Limit switch, 9007, 240 VAC 10amp ms +option
	<u>9007MS04S0102</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS04S0200</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS04S0202</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS04S0300</u>	Limit switch, 9007, 240 VAC 10amp ms +option

	<u>9007MS04S0300</u>	Limit switch, 9007, 240 VAC 10amp ms +option
	<u>9007MS04S0310</u>	Limit switch, 9007, ms rotary spring rtn. _ CW & CCW, 9' bottom cable
	<u>9007MS04S0400</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS05G0410</u>	Limit switch, 9007, ms cat whisker any direction spring rtn., 12' bottom cable
	<u>9007MS05S0082</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS05S0100</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS05S0300</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS05S0500</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS06S0100</u>	LIMIT SWITCH 240VAC 10AMP MS +OPTIONS
	<u>9007MS06S0500</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS06S0506</u>	Limit switch, 9007, 240 VAC 10amp ms + options
	<u>9007MS07S0100</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS07S0300</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS07S0310</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS09G0112</u>	Limit switch, 9007, 240 VAC 10amp ms + options
	<u>9007MS09S0100</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS09S0200</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS09S0206</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS09S0500</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS09S0506</u>	Limit switch, 9007, ms top push plunger, adjustable, 18' side cable

	<u>9007MS09S1300</u>	Limit switch, 9007, ms top push plunger, adjustable, 33' bottom cable
	<u>9007MS10G1300</u>	Limit switch, 9007, 240 VAC 10amp ms + options
	<u>9007MS10S0054</u>	Limit switch, 9007, 240 VAC 10 A t ms
	<u>9007MS10S0100</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS10S0110</u>	Limit switch, 9007, ms top push plunger, booted, 3' bottom cable
	<u>9007MS10S0200</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS10S0206</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS10S0300</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS10S0321</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS10S0400</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS02G0054</u>	Limit switch, 9007, 240 VAC 3 amp ms +options
	<u>9007MS02G0100</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS02G0410</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS02S0054</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS02S005421</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS02S0082</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS02S0084</u>	Limit switch, 9007, switch
	<u>9007MS02S0100</u>	Limit switch, 9007, 240 VAC 10amp ms +option
	<u>9007MS02S0102</u>	Limit switch, 9007, 240 VAC 10amp ms +options
	<u>9007MS02S0110</u>	9007MS limit switch - parallel roller plunger - 3' bottom cable



[9007MS10S0506](#)

Limit switch, 9007, 240 VAC 10amp ms +options



[9007MS12S0054](#)

Limit switch, 9007, 240 VAC 10amp ms +options



[9007MS12S0100](#)

Limit switch, 9007, 240 VAC 10amp ms +options



[9007MS12S0300](#)

Limit switch, 9007, 240 VAC 10amp ms +options



[9007MS12S0310](#)

Limit switch, 9007, ms parallel roller plunger, booted,
9' bottom cable



[9007MSAEQ4057](#)

LIMIT SWITCH 240VAC 10AMP MS +OPTIONS

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: tuq@nt-rt.ru || сайт: <https://telemecanique.nt-rt.ru>