

Концевые выключатели 9007 АО/СО

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70





















Казахстан +(727)345-47-04


















 

 

Беларусь +(375)257-127-884
















 

 


Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: tuq@nt-rt.ru || сайт: <https://telemecanique.nt-rt.ru>

	<u>9007AB25</u>	Snap limit switch, 9007, roller lever plunger, NO/NC, RH bracket, one way roller
	<u>9007AB41</u>	Snap limit switch, 9007, 600 VAC 15amp ab +options
	<u>9007AC1</u>	Snap limit switch, 9007, 600 VAC 15amp AC +options
	<u>9007AC2</u>	SNAP SWITCH 600VAC 15AMP AC +OPTIONS
	<u>9007AD2</u>	SNAP SWITCH 600VAC 15AMP AC +OPTIONS
	<u>9007AEQ1359G1</u>	LIMIT SWITCH 600VAC 8AMP AO +OPTIONS
	<u>9007AEQ2699</u>	LIMIT SWITCH 600VAC 10AMP C SPECIAL
	<u>9007AEQ2724</u>	LIMIT SWITCH 600VAC 10AMP C SPECIAL
	<u>9007AEQ2789</u>	LIMIT SWITCH 600VAC 10A C SPECIAL
	<u>9007AC1</u>	Snap limit switch, 9007, 600 VAC 15amp AC +options
	<u>9007AC2</u>	SNAP SWITCH 600VAC 15AMP AC +OPTIONS
	<u>9007AD2</u>	SNAP SWITCH 600VAC 15AMP AC +OPTIONS
	<u>9007AEQ1359G1</u>	LIMIT SWITCH 600VAC 8AMP AO +OPTIONS
	<u>9007AEQ2699</u>	LIMIT SWITCH 600VAC 10AMP C SPECIAL
	<u>9007AEQ2724</u>	LIMIT SWITCH 600VAC 10AMP C SPECIAL
	<u>9007AEQ2789</u>	LIMIT SWITCH 600VAC 10A C SPECIAL
	<u>9007AEQ2841</u>	LIMIT SWITCH 600VAC 10A C SPECIAL
	<u>9007AEQ4090</u>	9007C LIMIT SWITCH + OPTIONS
	<u>9007AO1</u>	Snap basic limit switch, 9007, 600 VAC 15amp ao +options
	<u>9007AO1B</u>	Snap basic limit switch, 9007, 600 VAC 15amp ao +options

	9007AB1	2517C1G1
	9007AB1S1	SNAP SWITCH 600VAC 15AMP AB +OPTIONS
	9007AB2	SNAP SWITCH 600VAC 15AMP AB +OPTIONS
	9007AB21	Snap limit switch, 9007, 600 VAC 15amp ab +options
	9007AB22	Snap limit switch, 9007, 600 VAC 15amp ab +options
	9007AB23	Snap limit switch, 9007, 600 VAC 15amp ab +options
	9007AB24	Snap limit switch, 9007, 600 VAC 15amp ab +options
	9007AB25	Snap limit switch, 9007, roller lever plunger, NO/NC, RH bracket, one way roller
	9007AB41	Snap limit switch, 9007, 600 VAC 15amp ab +options
	9007CB33	Snap limit switch, 9007, 600 V 10amp cb +options
	9007CB33S1	Snap limit switch, 9007, 600 V, 10 amp, cb + options
	9007CB34	Snap limit switch, 9007, 600 V 10amp cb +options
	9007CB34S1	Snap limit switch, 9007, 600 V 10amp cb special +optio
	9007CB41	Snap limit switch, 9007, 600 V 10amp cb +options
	9007CO3	Snap basic limit switch, 9007, 600 V 10amp c +options
	9007CO5	SNAP SWITCH 600V 10AMP C +OPTIONS
	9007CO52B2	LIMIT SWITCH PLUG IN UNIT 600V 10A C
	9007CO6	Snap basic limit switch, 9007, plunger, 2 NO, plug in
	9007CO62B2	Limit switch plug in unit, 9007, 600 V 10 A c
	9007CO7	Snap basic limit switch, 9007, 600 V 10amp co +options
	9007CP221	Snap limit switch, 9007, basic 600 V 10amp c +options

	<u>9007AO2</u>	Snap basic limit switch, 9007, 600 VAC 15amp ao +options
	<u>9007AO2B</u>	Snap basic limit switch, 9007, plunger, NO, panel mount
	<u>9007AO4</u>	SNAP SWITCH 600VAC 15AMP AO +OPTIONS
	<u>9007AO46</u>	75037-133-54
	<u>9007AO6</u>	Snap basic limit switch, 9007, 600 VAC 15amp ao +options
	<u>9007AP201</u>	Snap limit switch operator, 9007, 600 VAC 15amp ap +options
	<u>9007AP221</u>	Snap limit switch, 9007, 600 VAC 15amp ap +options
	<u>9007AP301</u>	Snap limit switch operator, 9007, parallel roller plunger bushing mount
	<u>9007AP321</u>	Snap limit switch, 9007, 600 VAC 15amp ap +options
	<u>9007AP323</u>	Snap limit switch, 9007, parallel roller plunger, NO/NC, bushing mount, oiltight
	<u>9007AW12M16</u>	Limit switch, 9007, 600 VAC 15amp aw +options
	<u>9007AW18M16</u>	Limit switch, 9007, 600 VAC 10amp aw +options
	<u>9007AW36M16</u>	Limit switch, 9007, 600 VAC 15amp aw +options
	<u>9007AW38S3</u>	LIMIT SWITCH 600VAC 10AMP AW +OPTIONS
	<u>9007AW48</u>	LIMIT SWITCH 600VAC 10AMP AW +OPTIONS
	<u>9007AWSBA</u>	LIMIT SWITCH BOX AND LINER
	<u>9007CB300S1</u>	LIMIT SWITCH TURRET HEAD 600V 10AMP C SP
	<u>9007CB300SIY140</u>	LIMIT SWITCH TURRET HEAD 600V 10AMP C SP
	<u>9007CB31</u>	Snap limit switch, 9007, 600 V 10amp cb +options
	<u>9007CB32</u>	Snap limit switch, 9007, 600 V 10amp cb +options

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: tuq@nt-rt.ru || сайт: <https://telemecanique.nt-rt.ru>