

Концевые выключатели L100/L300

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70





















Казахстан +(727)345-47-04





















Беларусь +(375)257-127-884



















 

Узбекистан +998(71)205-18-59








 

 
 
 








Киргизия +996(312)96-26-47

эл.почта: tuq@nt-rt.ru || сайт: <https://telemecanique.nt-rt.ru>

	<u>AD1</u>	Limit switch lever, L100/300, aluminum, fixed length, center steel roller
	<u>AHN</u>	Limit switch lever, L100/300, aluminum, fixed length, center nylon roller
	<u>AK</u>	LEVER OPERATING
	<u>AK2</u>	Limit switch lever, L100/300, aluminum, fixed length, center steel roller
	<u>AL2820</u>	Limit switch lever, L100/300, L525, operating
	<u>AQ</u>	Limit switch lever, L100/300, L525, operating
	<u>AP</u>	Limit switch lever, L100/300, L525, operating
	<u>API</u>	Limit switch lever, L100/300, aluminum, fixed length, center steel roller
	<u>AQ</u>	LEVER OPERATING
	<u>AR</u>	Limit switch lever, L100/300, L525, operating
	<u>AR2N</u>	LEVER OPERATING
	<u>ARN</u>	Limit switch lever, L100/300, aluminum, fixed length, center nylon roller
	<u>BA</u>	Limit switch lever, arm, aw + c + options
	<u>BH</u>	LEVER BH
	<u>BL100WS2M1</u>	Limit switch, L100/300, 600 VAC 10 amp type I options
	<u>BR</u>	LEVER OPERATING
	<u>CC</u>	Limit switch lever, arm, aw + c + options
	<u>CHI</u>	Limit switch lever, L100/300, aluminum, fixed length, outside steel roller
	<u>CH2</u>	Limit switch lever, L100/300, L525, operating
	<u>DE9RA1434</u>	Harmony XPE, nipple cm14 3/4" NPT

	DE9RA14341	Harmony XPE, nipple cm14 3/4" NPT
	EA	Limit switch lever, L100/300, aluminum, one way, center steel roller
	EB	Limit switch lever, L100/300, L525, operating
	FA	Limit switch lever, arm, aw + c + options
	FE1	ARM LEVER 2 STEEL ROLLER 1 DIA
	FG	Limit switch lever, L100/300, L525, operating
	FI1	Limit switch lever, arm, aw + c + options
	HL100WN2M16	Limit switch, L100/300, 9007,
	HL100WNS2M26	Limit switch, L100/300, 9007,
	HL100WS2M1	Limit switch, L100/300, 9007,
	HL100WS2M2	Limit switch, L100/300, 9007,
	HL100WTR2M10	Limit switch, L100/300, L100 mill 3 contacts, spring return, CW, 3/4" NPT
	HL300WDL2M7	Limit switch, L100/300, 9007,
	HL300WDR2M4	Limit switch, L100/300, 9007,
	HL300WN2M16	Limit switch, L100/300, 9007,
	HL300WNCS2M34	Limit switch, L100/300, L300 foundry 2 contacts, spring return, CW+CCW, 1/2" NPT
	HL300WNS2M26	Limit switch, L100/300, 600 V 12amp I + options
	HL300WS2M1	Limit switch, L100/300, 9007,
	HL300WS2M2	Limit switch, L100/300, 9007,
	HL300WTL2M13	Limit switch, L100/300, L300 foundry 3 contacts, spring return, CCW, 3/4" NPT

	HL300WTL2M14	Limit switch, L100/300, 9007,
	L100WDL2M7	Limit switch, L100/300, 600 V 10amp type I +options
	L100WDL2M8	Limit switch, L100/300, 600 V 10amp type I +options
	L100WDR2M4	Limit switch, L100/300, 600 V 10amp type I +options
	L100WDR2M5	Limit switch, L100/300, L100 mill 2 contacts, spring return, CCW, 1/2" NPT
	L100WN2M16	Limit switch, L100/300, 600 V 10amp type I +options
	L100WN2M17	Limit switch, L100/300, 600 V 10amp type I +options
	L100WNC2M18	Limit switch, L100/300, 600 V 10amp type I +options
	L100WNCS2M34	Limit switch, L100/300, 600 V 10amp type I +options
	L100WNS2M26	Limit switch, L100/300, 600 V 10amp type I +options
	L100WNSL2M29	Limit switch, L100/300, 600 V 10amp type I +options
	L100WS0S2M61	Limit switch, L100/300, 600 V 10amp, type I + options
	L100WS2GF3	Limit switch, L100/300, 600 V 10amp, type I + options
	L100WS2M1	Limit switch, L100/300, L525, 600 V 10amp type I +options
	L100WS2M2	Limit switch, L100/300, L525, 600 V 10amp type I +options
	L100WS2M3	Limit switch, L100/300, L525, 600 V 10amp type I +options
	L100WS2PF2	Limit switch, L100/300, 600 V 10amp, type I + options
	L100WS2PF3	LIMIT SWITCH 600V 10AMP TYPE L +OPTIONS
	L100WTL2M13	Limit switch, L100/300, L525, 600 V 10amp type I +options
	L100WTL2M14	Limit switch, L100/300, L525, 600 V 10amp type I +options

	<u>L100WTLN1C2M39</u>	Limit switch, L100/300, L525, 600 V 10amp type I +options
	<u>L100WTLN2C2M41</u>	Limit switch, L100/300, L100 mill 3 contacts, spring return, CW+CCW, 3/4" NPT
	<u>L100WTLN2M21</u>	Limit switch, L100/300, L525, 600 V 10amp type I +options
	<u>L100WTR2M10</u>	Limit switch, L100/300, L525, 600 V 10amp type I +options
	<u>L100WTR2M11</u>	Limit switch, L100/300, L525, 600 V 10amp type I +options
	<u>L100WTRN1C2M38</u>	Limit switch, L100/300, L525, 600 V 10amp type I +options
	<u>L300WDL2M7</u>	Limit switch, L100/300, L300 foundry 2 contacts, spring return, CCW, 1/2" NPT
	<u>L300WDL2M8</u>	Limit switch, L100/300, L300 foundry 2 contacts, spring return, CW, 1/2" NPT
	<u>L300WDR2M4</u>	Limit switch, L100/300, 600 V 12amp type I +options
	<u>L300WN2M16</u>	Limit switch, L100/300, 600 V 12amp type I +options
	<u>L300WNC2M18</u>	Limit switch, L100/300, L300 foundry 2 contacts, spring return, CW+CCW, 1/2" NPT
	<u>L300WNCS2M34</u>	Limit switch, L100/300, 600 V 12amp type I +options
	<u>L300WNS2M26</u>	Limit switch, L100/300, 600 V 12amp type I +options
	<u>L300WS1M1</u>	Limit switch, L100/300, 600 VAC 12 A t I
	<u>L300WS1M2</u>	Limit switch, L100/300, 600 V AC, 12 A, T L, snap action
	<u>L300WS2M1</u>	Limit switch, L100/300, L300 foundry 2 contacts, spring return, CW, 1/2" NPT
	<u>L300WS2M2</u>	Limit switch, L100/300, L525, 600 V 12amp type I +options
	<u>L300WS2M3</u>	Limit switch, L100/300, 600 VAC 12 A t I
	<u>L326WS2M1</u>	Limit switch, L100/300, 600 V AC, 12 A, T L, snap action
	<u>PL100WDL2M7</u>	Limit switch, L100/300, 600 V 10amp type I +options



[PL100WNS2M26](#)

Key, Limit switch, OsiSense XC, L525, L100/300, 9007,



[PL100WS2M2](#)

Key, Limit switch, OsiSense XC, L525, L100/300, 9007,



[PL300WN2M16](#)

Key, Limit switch, OsiSense XC, L525, L100/300, 9007,



[PL340WDR2M4](#)

Key, Limit switch, OsiSense XC, L525, L100/300, 9007,



[VA](#)

Limit switch lever, L100/300, L525, operating



[VAI](#)

Limit switch lever, L100/300, aluminum, adj. 75°-180°
fork, outside rollers



[VAN](#)

Limit switch lever, L100/300, aluminum, adj. 75°-180°
fork, outside rollers

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Волгодла (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Россия +7(495)268-04-70

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Камерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Кзахакстан + (727)345-47-04

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новорыск (3495)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Перль (342)205-81-47

Беларусь + (375)257-127-884

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Узбекистан +998(71)205-18-59

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Киргизия +996(312)96-26-47

По вопросам продаж и поддержки обращайтесь:

эл. почта: tuq@nt-rt.ru || сайт: <https://telemecanique.nt-rt.ru>