

Электромеханические датчики давления для цепи управления

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70





















Казахстан +(727)345-47-04

Беларусь +(375)257-127-884







 

 






Узбекистан +998(71)205-18-59





















Киргизия +996(312)96-26-47





















эл.почта: tuq@nt-rt.ru || сайт: <https://telemecanique.nt-rt.ru>





















	<u>ACW1M119012</u>	Pressure sensors XM, Electromechanical pressur sensor switch, adjustable differential 17 Bar max
	<u>ACW1M129012</u>	Pressure sensors XM, pressure switch ACW 7.6 bar, adjustable scale 2 thresholds, ICO
	<u>ACW21M129012</u>	Pressure sensors XM, pressure switch ACW 7.6 bar, adjustable scale 2 thresholds, 2CO
	<u>ACW23M129012</u>	Pressure sensors XM, pressure switch ACW 0.7 bar, adjustable scale 2 thresholds, 2CO
	<u>ACW25M119012</u>	Pressure sensors XM, pressure switch ACW 5.2 bar, adjustable scale 2 thresholds, 2CO
	<u>ACW28M119012</u>	Pressure sensors XM, pressure switch ACW 12 bar, adjustable scale 2 thresholds, 2CO
	<u>ACW4M129012</u>	Pressure sensors XM, pressure switch ACW 1.4 bar, adjustable scale 2 thresholds, ICO
	<u>ACW5M119012</u>	Pressure sensors XM, pressostat, with 0,07 to 7,6 bars, ACW5
	<u>ACW5M129012</u>	Pressure sensors XM, pressure switch ACW 5.2 bar, adjustable scale 2 thresholds, ICO
	<u>ACW7M129012</u>	Pressure sensors XM, pressure switch ACW 69 bar, adjustable scale 2 thresholds, ICO
	<u>ACW8M119012</u>	Pressure sensors XM, pressostat, with 0,07 to 7,6 bars, ACW8
	<u>ACW8M129012</u>	Pressure sensors XM, pressure switch ACW 12 bar, adjustable scale 2 thresholds, ICO
	<u>ADW3M129012</u> END_OF_COMMERC_ANNOUNCED	Pressure sensors XM, pressure switch ADW 69 bar, adjustable scale 2 thresholds, ICO
	<u>ADW4M129012</u> END_OF_COMMERC_ANNOUNCED	Pressure sensors XM, pressure switch ADW 210 bar, adjustable scale 2 thresholds, ICO
	<u>ADW6M119012</u> END_OF_COMMERC_ANNOUNCED	Pressure sensors XM, Electromechanical pressur sensor switch, 210 Bar adjustable
	<u>ADW6M129012</u> END_OF_COMMERC_ANNOUNCED	Pressure sensors XM, pressure switch ADW 210 bar, adjustable scale 2 thresholds, ICO
	<u>ADW7M129012</u> END_OF_COMMERC_ANNOUNCED	Pressure sensors XM, pressure switch ADW 340 bar, adjustable scale 2 thresholds, ICO
	<u>DE9PMI201</u>	Pg 13.5 plastic cable gland, with anti pull out ring, Ø 6...9 mm
	<u>XMAV06L2135</u>	Pressure sensors XM, pressure switch XMA 6 bar, adjustable scale 2 thresholds, 1 C/O
	<u>XMAV12L2135</u>	Pressure sensors XM, pressure switch XMA 12 bar, adjustable scale 2 thresholds, 1 C/O















 





	<u>XMAV25L2135</u>	Pressure sensors XM, pressure switch XMA 25 bar, adjustable scale 2 thresholds, 1 C/O
	<u>XMAZL001</u>	Pressure sensors XM, fixing bracket, for electromechanical pressure switch
	<u>XMLA001R2S11</u>	pressure switch XMLA 1 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA001S2S11</u>	pressure switch XMLA 1 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA002A2C11</u>	pressure switch XMLA 2.5 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA002A2S11</u>	pressure switch XMLA 2.5 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA002A2S12</u>	pressure switch XMLA 2.5 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA002C2S11</u>	pressure switch XMLA 2.5 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA004A2C11</u>	pressure switch XMLA 4 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA004A2S11</u>	pressure switch XMLA 4 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA004A2S12</u>	pressure switch XMLA 4 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA004A2S13</u>	pressure switch XMLA 4 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA004B2S11</u>	pressure switch XMLA 4 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA004C2S11</u>	pressure switch XMLA 4 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA010A2C11</u>	pressure switch XMLA 10 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA010A2S11</u>	pressure switch XMLA 10 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA010A2S12</u>	pressure switch XMLA 10 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA010A2S13</u>	pressure switch XMLA 10 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA010A2S14</u>	pressure switch XMLA 10 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA010B2S11</u>	pressure switch XMLA 10 bar - fixed scale 1 threshold - 1 C/O

	<u>XMLA010C2S11</u>	pressure switch XMLA 10 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA020A2C11</u>	pressure switch XMLA 20 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA020A2S11</u>	pressure switch XMLA 20 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA020A2S12</u>	pressure switch XMLA 20 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA020A2S13</u>	pressure switch XMLA 20 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA020A2S14</u>	pressure switch XMLA 20 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA020B2C11</u>	pressure switch XMLA 20 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA020B2S11</u>	pressure switch XMLA 20 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA020B2S12</u>	pressure switch XMLA 20 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA020C2S11</u>	pressure switch XMLA 20 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA070D2S12</u>	pressure switch XMLA 70 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA070D2S13</u>	pressure switch XMLA 70 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA070D2S14</u>	pressure switch XMLA 70 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA070E2S11</u>	pressure switch XMLA 70 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA070E2S13</u>	pressure switch XMLA 70 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA070N2S11</u>	pressure switch XMLA 70 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA070N2S12</u>	pressure switch XMLA 70 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA160D2C11</u>	pressure switch XMLA 160 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA160D2S11</u>	pressure switch XMLA 160 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA160D2S12</u>	pressure switch XMLA 160 bar - fixed scale 1 threshold - 1 C/O





	<u>XMLA020P2S12</u>	pressure switch XMLA 20 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA035A2C11</u>	pressure switch XMLA 35 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA035A2S11</u>	pressure switch XMLA 35 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA035A2S12</u>	pressure switch XMLA 35 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA035A2S14</u>	pressure switch XMLA 35 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA035B2C11</u>	pressure switch XMLA 35 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA035B2S11</u>	pressure switch XMLA 35 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA035C2C11</u>	pressure switch XMLA 35 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA070D2C11</u>	pressure switch XMLA 70 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA070D2S11</u>	pressure switch XMLA 70 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA160D2S13</u>	pressure switch XMLA 160 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA160D2S14</u>	pressure switch XMLA 160 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA160E2S11</u>	pressure switch XMLA 160 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA160N2C11</u>	pressure switch XMLA 160 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA160N2S11</u>	pressure switch XMLA 160 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA300D2C11</u>	pressure switch XMLA 300 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA300D2S11</u>	pressure switch XMLA 300 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA300D2S12</u>	pressure switch XMLA 300 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA300D2S13</u>	pressure switch XMLA 300 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA300D2S14</u>	pressure switch XMLA 300 bar - fixed scale 1 threshold - 1 C/O



















 
 
	<u>XMLA300E2S11</u>	pressure switch XMLA 300 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA300E2S12</u>	pressure switch XMLA 300 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA300N2S11</u>	pressure switch XMLA 300 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA500D2S11</u>	pressure switch XMLA 500 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA500D2S12</u>	pressure switch XMLA 500 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA500D2S13</u>	pressure switch XMLA 500 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA500D2S14</u>	pressure switch XMLA 500 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA500N2C11</u>	pressure switch XMLA 500 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLA500N2S11</u>	pressure switch XMLA 500 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLAM01V2S11</u>	vacuum switch XMLA -1 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLAM01V2S12</u>	vacuum switch XMLA -1 bar - fixed scale 1 threshold - 1 C/O
	<u>XMLB001R2S11</u>	pressure switch XMLB 1 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB001S2S12</u>	pressure switch XMLB 1 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB002A2S11</u>	pressure switch XMLB 2.5 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB002A2S11002</u>	pressure switch XMLB 2.5 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB002A2S12</u>	pressure switch XMLB 2.5 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB002B2S11</u>	pressure switch XMLB 2.5 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB004A2C11</u>	pressure switch XMLB 4 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB004A2S11</u>	pressure switch XMLB 4 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB004A2S12</u>	pressure switch XMLB 4 bar - adjustable scale 2 thresholds - 1 C/O

	<u>XMLB004A2S13</u>	pressure switch XMLB 4 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB004B2S11</u>	pressure switch XMLB 4 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB004C2C11</u>	pressure switch XMLB 4 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB010A2C11</u>	pressure switch XMLB 10 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB010A2S11</u>	pressure switch XMLB 10 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB010A2S11030</u>	Pressure sensor switch - 10 Bar G 1/4 femal
	<u>XMLB010A2S11033</u>	Pressure sensor switch - 10 Bar G 1/4 femal
	<u>XMLB010A2S12</u>	pressure switch XMLB 10 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB010A2S13</u>	pressure switch XMLB 10 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB010A2S14</u>	pressure switch XMLB 10 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB010B2S11</u>	pressure switch XMLB 10 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB010C2C11</u>	pressure switch XMLB 10 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB010C2S11</u>	pressure switch XMLB 10 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB020A2S11</u>	pressure switch XMLB 20 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB020A2S12</u>	pressure switch XMLB 20 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB020A2S13</u>	pressure switch XMLB 20 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB020B2S11</u>	pressure switch XMLB 20 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB020C2S11</u>	pressure switch XMLB 20 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB020C2S12</u>	pressure switch XMLB 20 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB035A2C11</u>	pressure switch XMLB 35 bar - adjustable scale 2 thresholds - 1 C/O

	<u>XMLB035A2S11</u>	pressure switch XMLB 35 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB035A2S14</u>	pressure switch XMLB 35 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB035B2S11</u>	pressure switch XMLB 35 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB070D2S11</u>	pressure switch XMLB 70 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB070D2S14</u>	pressure switch XMLB 70 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB070N2S11</u>	pressure switch XMLB 70 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB160D2C11</u>	pressure switch XMLB 160 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB160D2S11</u>	pressure switch XMLB 160 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB160D2S12</u>	pressure switch XMLB 160 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB160D2S14</u>	pressure switch XMLB 160 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB500D2S14</u>	pressure switch XMLB 500 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB500N2C11</u>	pressure switch XMLB 500 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB500N2S11</u>	pressure switch XMLB 500 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB500N2S12</u>	pressure switch XMLB 500 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLBL35R2S11</u>	pressure switch XMLB 350 mbar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLBL35R2S13</u>	pressure switch XMLB 350 mbar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLBM02V2C11</u>	vacuum switch XMLB -1 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLBM02V2S11</u>	vacuum switch XMLB -1 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLBM02V2S12</u>	vacuum switch XMLB -1 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLBM05A2S11</u>	vacu-pressure sensor XMLB 5 bar - adjustable scale 2 thresholds - 1 C/O

	<u>XMLB160N2S11</u>	pressure switch XMLB 160 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB300D2C11</u>	pressure switch XMLB 300 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB300D2S11</u>	pressure switch XMLB 300 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB300D2S1ISA4</u>	Pressure sensor switch - 300 Bar G 1/4 femal
	<u>XMLB300D2S12</u>	pressure switch XMLB 300 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB300D2S14</u>	pressure switch XMLB 300 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB300N2S12</u>	pressure switch XMLB 300 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB500D2C11</u>	pressure switch XMLB 500 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB500D2S11</u>	pressure switch XMLB 500 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLB500D2S12</u>	pressure switch XMLB 500 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLBS02B2S11</u>	pressure switch XMLB 2.5 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLBS04B2S11</u>	pressure switch XMLB 4 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLBS04B2S12</u>	pressure switch XMLB 4 bar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLBS35R2S11</u>	pressure switch XMLB 330 mbar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLBS35R2S11SCQ</u>	pressure switch XMLB 330 mbar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLBS35R2S12</u>	pressure switch XMLB 330 mbar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLC002B2S11</u>	pressure switch XMLC 2.5 bar - adjustable scale 2 thresholds - 2 C/O
	<u>XMLC002B2S12</u>	pressure switch XMLC 2.5 bar - adjustable scale 2 thresholds - 2 C/O
	<u>XMLC004B2S11</u>	pressure switch XMLC 4 bar - adjustable scale 2 thresholds - 2 C/O
	<u>XMLC004B2S11045</u>	SPECIFIC PRESSURE SWITCH XMLC 4 BAR ADJUSTABLE

	<u>XMLC004B2S12</u>	pressure switch XMLC 4 bar - adjustable scale 2 thresholds - 2 C/O
	<u>XMLC010A2S1I035</u>	Pressure sensor switch - 10 Bar G 1/4 femal
	<u>XMLC010B2S11</u>	pressure switch XMLC 10 bar - adjustable scale 2 thresholds - 2 C/O
	<u>XMLC010B2S12</u>	pressure switch XMLC 10 bar - adjustable scale 2 thresholds - 2 C/O
	<u>XMLC010C2S12</u>	pressure switch XMLC 10 bar - adjustable scale 2 thresholds - 2 C/O
	<u>XMLC010C2S12SAM</u>	pressure switch XMLC 10 bar - adjustable scale 2 thresholds - 2 C/O
	<u>XMLC020B2S11</u>	pressure switch XMLC 20 bar - adjustable scale 2 thresholds - 2 C/O
	<u>XMLC020B2S12</u>	pressure switch XMLC 20 bar - adjustable scale 2 thresholds - 2 C/O
	<u>XMLC035B2S12</u>	pressure switch XMLC 35 bar - adjustable scale 2 thresholds - 2 C/O
	<u>XMLC160D2S11</u>	pressure switch XMLC 160 bar - adjustable scale 2 thresholds - 2 C/O
	<u>XMLC160D2S12</u>	pressure switch XMLC 160 bar - adjustable scale 2 thresholds - 2 C/O
	<u>XMLC300D2S11</u>	pressure switch XMLC 300 bar - adjustable scale 2 thresholds - 2 C/O
	<u>XMLC300D2S12</u>	pressure switch XMLC 300 bar - adjustable scale 2 thresholds - 2 C/O
	<u>XMLCM05A2S11</u>	vacu-pressure sensor XMLC 5 bar - adjustable scale 2 thresholds - 2 C/O
	<u>XMLCS02B2S11</u>	pressure switch XMLC 2.5 bar - adjustable scale 2 thresholds - 2 C/O
	<u>XMLCS02B2S1ISC9</u>	pressure switch XMLC 2.5 bar - adjustable scale 2 thresholds - 2 C/O
	<u>XMLCS02B2S12</u>	pressure switch XMLC 2.5 bar - adjustable scale 2 thresholds - 2 C/O
	<u>XMLCS02B2S12SB5</u>	pressure switch XMLC 2.5 bar - adjustable scale 2 thresholds - 2 C/O
	<u>XMLCS02B2S13</u>	pressure sensor XMLC 2.5 bar - adjustable scale 2 threshold - 2C/O -with display
	<u>XMLCS04B2S11</u>	pressure switch XMLC 4 bar - adjustable scale 2 thresholds - 2 C/O

	<u>XMLD500D1S11</u>	pressure switch XMLD 500 bar - 2 stages fixed scale - 2 C/O
	<u>XMLDL35R1S12</u>	pressure switch XMLD 350 mbar - 2 stages fixed scale - 2 C/O
	<u>XMLDM02V1S11</u>	vacuum switch XMLD -1 bar - 2 stages fixed scale - 2 C/O
	<u>XMLZL001</u>	Pressure sensors XM, lead sealable protective cover, for pressure switch
	<u>XMLZL013</u>	Pressure sensors XM, diaphragm, for pressure switch XML S35
	<u>XMLZL014</u>	Pressure sensors XM, diaphragm, for pressure switch XML S02
	<u>XMLXA06L2135</u>	Pressure sensors XM, pressure switch XM 6 bar, adjustable scale 2 thresholds, 1 C/O
	<u>XMLXA06L2435</u>	Pressure sensors XM, pressure switch XM 6 bar, adjustable scale 2 thresholds, 1 C/O
	<u>XMLXA06L2435H718</u>	Pressure sensors XM, pressure switch XM 6 bar, adjustable scale 2 thresholds, 1 C/O
	<u>XMLXA12L2135</u>	Pressure sensors XM, pressure switch XM 12 bar, adjustable scale 2 thresholds, 1 C/O
	<u>XMLCS04B2S12</u>	pressure switch XMLC 4 bar - adjustable scale 2 thresholds - 2 C/O
	<u>XMLCS10A2S11</u>	pressure switch XMLC 10 bar - adjustable scale 2 thresholds - 2 C/O
	<u>XMLCS35R2S11</u>	pressure switch XMLC 330 mbar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLCS35R2S11SC8</u>	pressure switch XMLC 330 mbar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLCS35R2S12</u>	pressure switch XMLC 330 mbar - adjustable scale 2 thresholds - 1 C/O
	<u>XMLCS35R2S13</u>	PRESSURE SWITCH ADJUST SCALE 2 THRESHOLD 30 Bar max
	<u>XMLD010B1S11</u>	pressure switch XMLD 10 bar - 2 stages fixed scale - 2 C/O
	<u>XMLD020C1S12</u>	pressure switch XMLD 20 bar - 2 stages fixed scale - 2 C/O
	<u>XMLD035B1S11</u>	pressure switch XMLD 35 bar - 2 stages fixed scale - 2 C/O
	<u>XMLD160D1S13</u>	pressure switch XMLD 160 bar - 2 stages fixed scale - 2 C/O



[XMxA25L2135](#)

Pressure sensors XM, pressure switch XMX 25 bar, adjustable scale 2 thresholds, 1 C/O



[XZCC43FCP40B](#)

Female, DIN 43650 A, 4 pin, elbowed connector, cable gland Pg 11



[XZCR1523062K1](#)

Jumper cable XZ, male straight M12 3 pin, female elbowed DIN 43650 A, PUR 1 m

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: tuq@nt-rt.ru || сайт: <https://telemecanique.nt-rt.ru>